




servicegegevens

PHILIPS

22 RB 384

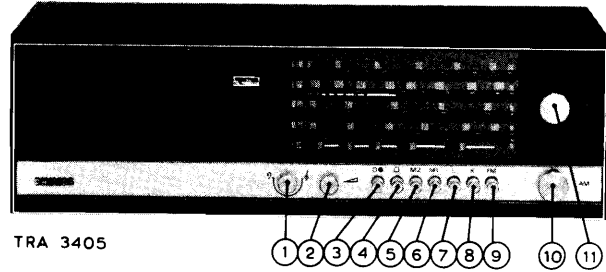

BEDIENINGSORGANEN


- | | |
|------------------|----------------|
| 1 Klank | (R63) |
| 2 Geluidsterkte | (R64) |
| 3 Aan/uit | (SK-1) |
| 4 PU | (SK-II) |
| 5 Middengolf 2 | (SK-III) |
| 6 Middengolf 1 | (SK-IV) |
| 7 Langegolf | (SK-V) |
| 8 Kortegolf | (SK-VI) |
| 9 FM | (SK-VII) |
| 10 Afstemming AM | (C31)
(C33) |
| 11 Afstemming FM | (S4)
(S6/7) |

CODENUMMERS

- | | |
|------------------------------------|----------------|
| Kast (/00) noten | 4822 425 60061 |
| Kast (/62/63) teak | 4822 425 60063 |
| Kast (/72/73) palissander | 4822 425 60064 |
| Kast (/92) macorée | 4822 425 60065 |
| Voet | 4822 462 70561 |
| Frontplaat | 4822 426 50062 |
| Beugel voor bevestiging achterwand | 4822 401 10012 |
| Afstemindicator M | 4822 346 10068 |
| Knop (afstemming AM, FM) | 4822 413 40415 |
| Knop (klank, geluidsterkte) | 4822 413 30362 |
| Druktoets | 4822 410 20811 |
| Druktoetseenheid | 4822 276 70044 |
| Aansluiting antenne AM+FM | 4822 267 40129 |
| Steker antenne AM | 4822 264 30042 |
| Steker antenne FM | 4822 264 30043 |
| Aansluiting bandrecorder PU | 4822 267 40125 |
| Steker recorder, PU | 4822 266 30026 |
| Aansluiting LS | 4822 267 30182 |
| Steker LS | 4822 264 30041 |
| Snaarwiel AM | 4822 528 80358 |
| Ring bevestiging snaarwiel AM | 4822 492 61357 |
| Snaarwiel FM (met as) | 4822 528 80359 |
| Wijzer AM | 4822 450 80249 |
| Wijzer FM | 4822 450 80248 |
| Aandrijfsnaar | 4822 321 30102 |
| Geleiding voor aandrijfsnaar | 4822 462 70562 |
| Lamphouder | 4822 255 10007 |
| Diffusieplaat achter schaal | 4822 466 70162 |
| Schaal | 4822 333 50277 |
| FM eenheid | 4822 210 10131 |
| Detectie-eenheid (452 kHz) | 4822 210 20161 |
| Detectie-eenheid (460 kHz) | 4822 210 20159 |

- | | |
|------------------|----------------|
| S11, 12, 13, C19 | 4822 153 50093 |
| S14, 15, 16, 17 | 4822 158 60248 |
| S18, 19 | 4822 156 40502 |
| S20-25, C41, 42 | 4822 153 70012 |
| S26, 27, 28 | 4822 156 10328 |
| S29, 30, 31 | 4822 156 10329 |
| S32, 33, 34 | 4822 156 10331 |
| S38, 39, 40, C44 | 4822 153 10214 |
| S48-53 | 4822 146 20368 |
| Luidspreker | 4822 240 20101 |
| C22 | 4822 121 50083 |
| C25, 28 | 4822 125 50018 |
| C58, 61, 99 | |
| C26 | 4822 122 10083 |
| C31-34 | 4822 125 20148 |
| C35, 43 | 4822 121 50088 |
| C54 | 4822 121 50038 |
| C57 | 4822 121 50388 |
| C60 | 4822 125 50026 |
| C96 | 4822 124 40005 |
| TS3 | 4822 130 40421 |
| TS4 | |
| TS5 | |
| 40820 | |
| R44 | 4822 111 30156 |
| R63 | 4822 101 20116 |
| R64 | 4822 101 30083 |
| R71 | 4822 110 60061 |
| R72 | 4822 111 30111 |
| R74 | 4822 116 30082 |
| R75 | 4822 111 30014 |
| VL1 | 4822 252 20001 |
| LA1 | 4822 134 40008 |

S	41-46	O.N.P.G.H.	F	7	M.K.	6.	4.10	E	5.	4.10	E	B	1.2.3.
C	98	97	95	96	88	94	93	92	91	103	89	87	86
C	84	80	79	83	73	78	72	81	82	58	39	20	38
R	74	80	79	63	73	78	72	81	82	58	39	20	38
R	74	80	79	63	73	78	72	81	82	58	39	20	38
R	74	80	79	63	73	78	72	81	82	58	39	20	38
R	74	80	79	63	73	78	72	81	82	58	39	20	38

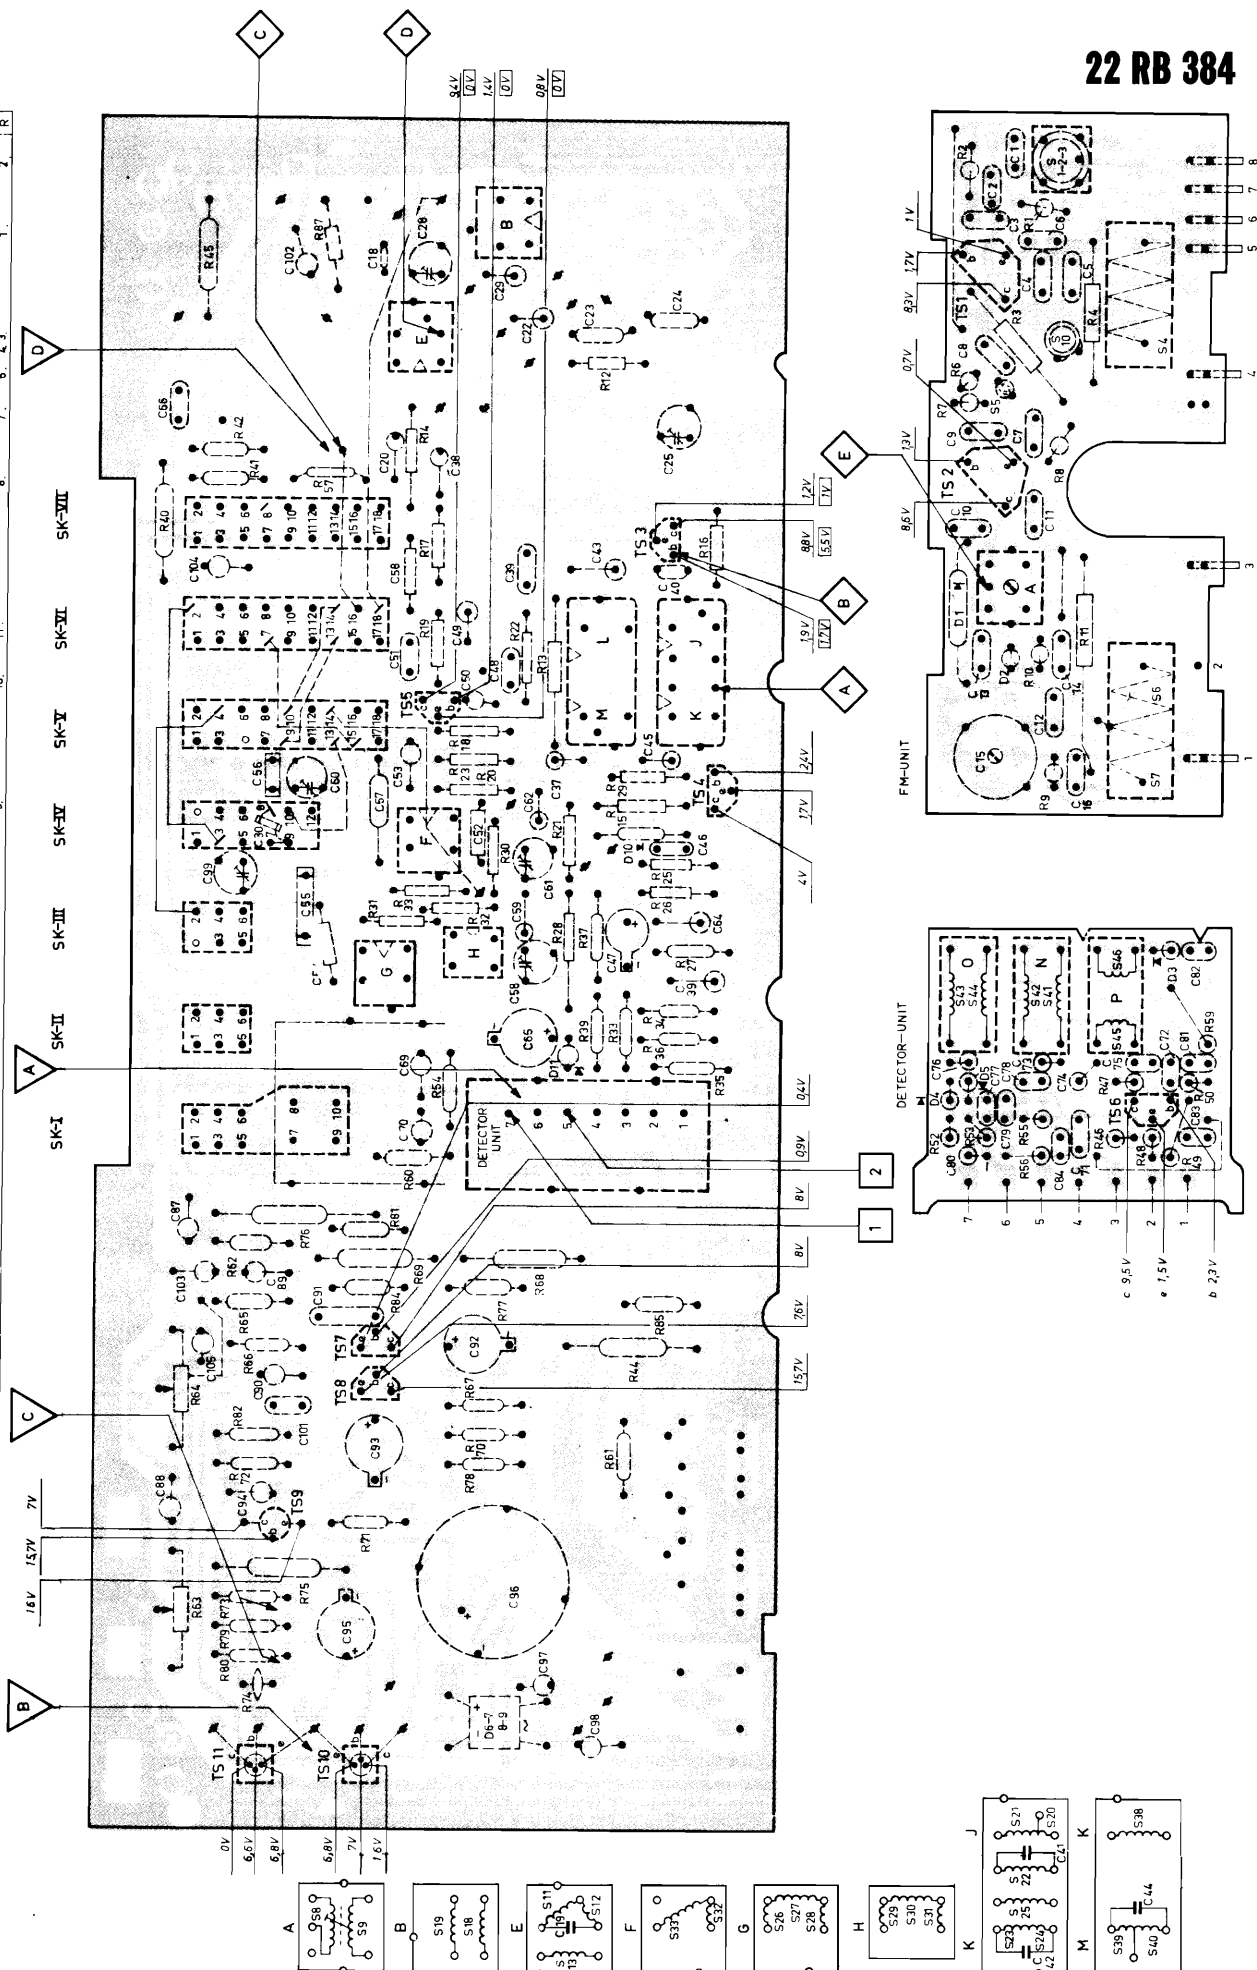

22 RB 384

Voor verdere gegevens en trimvoorschriften wordt verwezen naar de volledige servicedocumentatie.

22 RB 384

S	1	3	2	10	4	14	16	19	15	17	18	26-33	6	7	8	9	11	12	13	20	21	22	23	24	25	41	42	43	44	52	51	50	49	48																																																	
C	31	50	27	32	6	12	5	9	28	32	1	4	4	9	51	11	17	12	15	66	52	54	-62	16	13	10	14	10	20	30	18	33	34	19	26	20	37	38	39	40	41	43	48	44	45	47	42	64	46	63	87	69	71	103	88	72	73	74	89	90	75	105	65	91	101	76	82	92	81	96	83	77	79	78	80	93	84	94	98	97	70	106	95
R	86	1	20	23	18	19	4	58	3	2	12	6	7	8	11	33	45	9	31	32	40	30	87	10	57	13	15	16	14	17	22	21	29	28	61	94	27	26	25	37	85	36	35	76	62	47	46	63	48	65	66	64	84	48	68	69	50	82	44	58	67	77	81	52	53	78	71	56	55	70	72	74	75	73	38	39	80	79	54	60	41	42	

